


# STEP 2

## Install the AC-1 Antisplintering Insert. (used without the EZ Smart guide system)

**WEAR SAFETY GLASSES AT ALL TIMES AND PLUG IN YOUR SAW ONLY WHEN YOU ARE READY TO MAKE A CUT**



1. Raise your blade

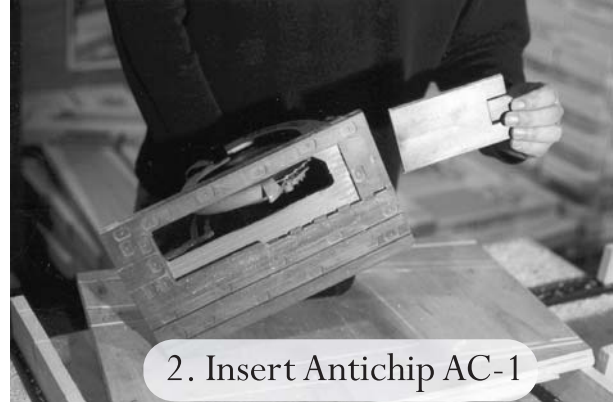


2. Insert Antichip AC-1



3. let it "click" in.



4. Place saw on Scrap wood

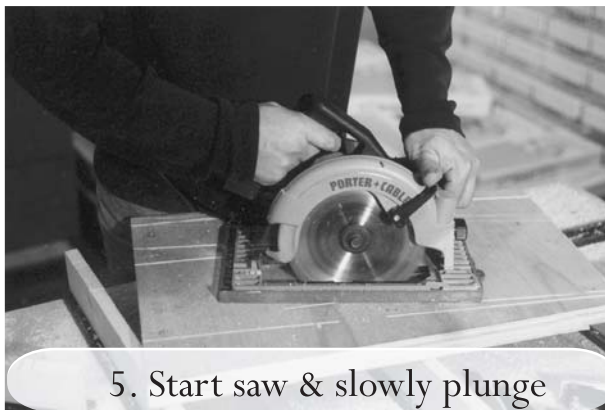

5. Start saw & slowly plunge it into the wood, cutting both the plastic anti-chip & wood



6. The results... Zero clearance Anti-chip

### Safety Note:

Make sure the saw blade is **completely stopped** before you

- A. Lift the saw from the guide
- B. Place your saw down.

Placing the saw down while the blade is spinning may damage the Anti-Chip AC-1 or if for some reason the saw guard is stuck, it may damage the surface or yourself.

That's why we highly recommend circular saws with electric brakes. All major manufacturers offer this feature, but you have to ask for it.

Notes: The anti-chip A was designed to be used without the EZ Smart Guide or if you have to use the EZ Smart as an edge guide for additional depth capacity