

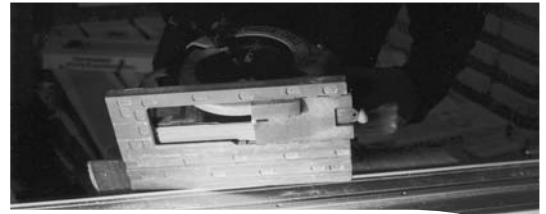


# STEP 3


## Install the AC-2 Antisplintering Insert. (the one that you use with the EZ Smart Guide system)

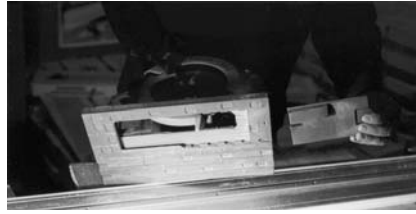

1. Just like before, Raise the blade and insert anti-Chip AC-2 until it clicks

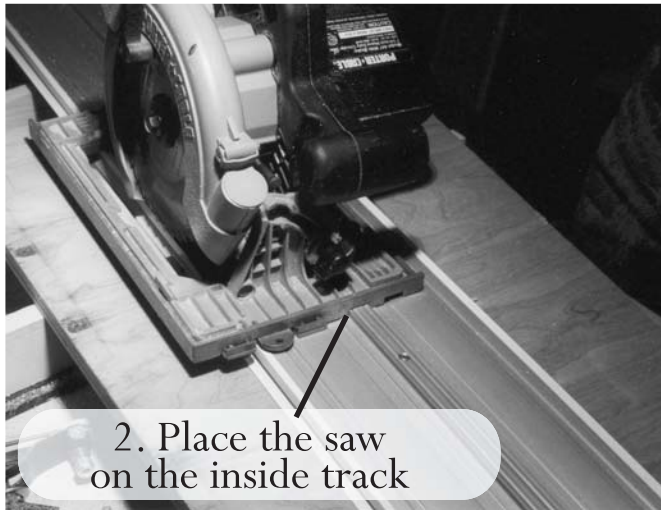

2. Place the saw on the inside track

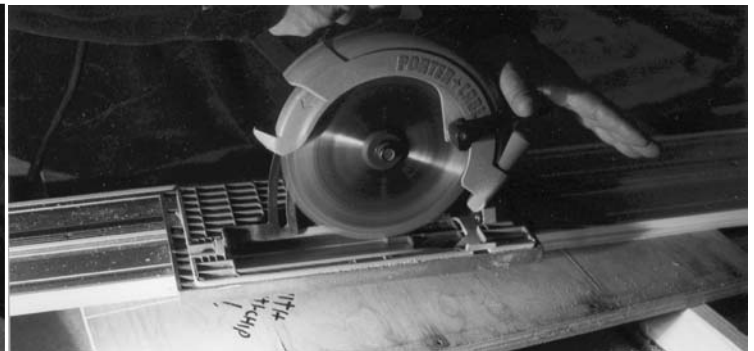


3. Just like before,  
Start the saw and slowly plunge it




4. Plunge cut all the way down,  
through the antichip and the wood



5. After your blade is completely stopped,  
snap off the trimmed piece as shown

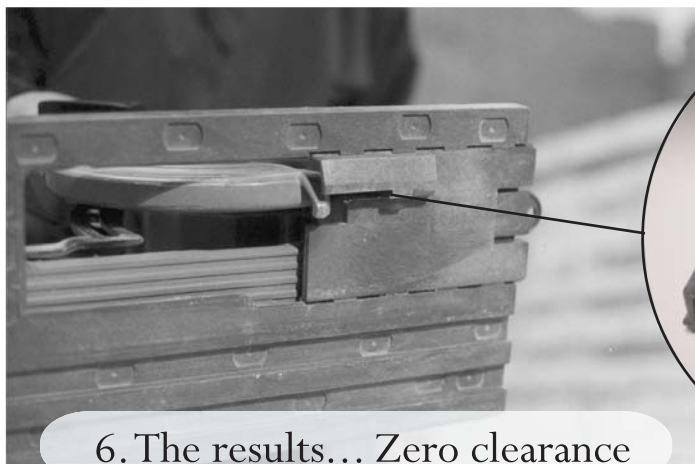

6. The results... Zero clearance  
Anti-chip on the right side of the blade

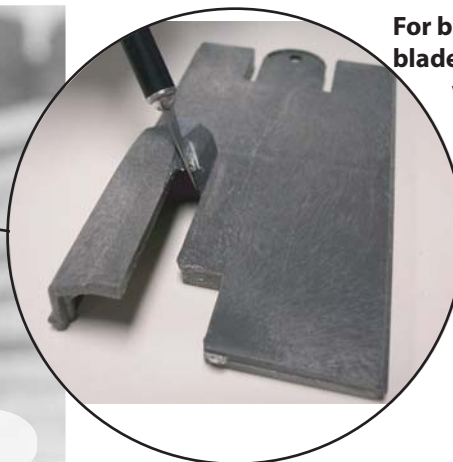

For best results, trim what your saw blade doesn't trim using a utility knife with a slight bevel so that the AC-2 does not rub against the EAC-1 while cutting.